The same Nikon A 6











Instruction manual/Manuel d'utilisation/Bedienungsanleitung/Manual de instrucciones

En CONTENTS 2-3 1 1 2 3 1 1 1 1 1 1 1 1 1	FOCUS	}	AVANT-PRO REMAR PANOR DESCRIPTIF OPERATIO MISE EN PLI CONTROLE I CHARGEMEI PRISE DE VL Prise de REMBOBINA TECHNIO PHOTOGRAP Mode F Mode F Mode F
Auto flash with red-eye reduction		*	

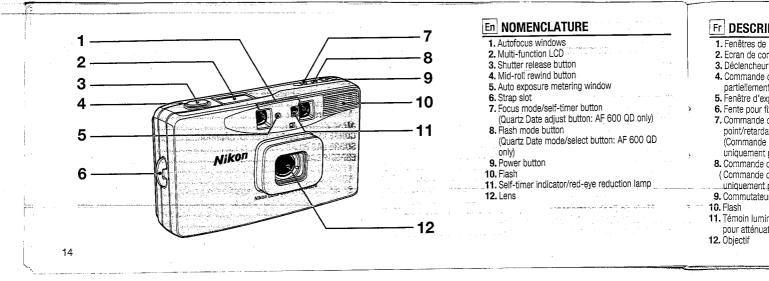

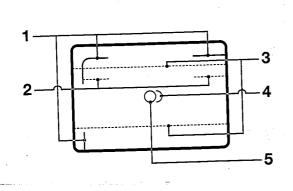

Viewfinder information

- 1. Parallax compensation marks for close-up shooting at a distance of 0.35m to 1m
- 2. Parallax compensation marks for Panorama close-up shooting at a distance of 0.35m to 1m 3. Panorama frame marks 4. Autofocus frame mark at a distance of 0.35m to
- 5. Autofocus frame mark

Information du


1. Repères de photographic 2. Repères de

cadrage pan 3. Repères déli

4. Zone de sen autofocus à

5. Zone de sen

autofocus

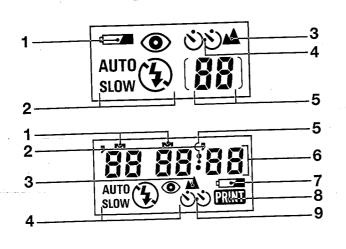

22

LCD panel AF 600

1. Insufficient battery power indicator 2. Flash mode indicator

3. Infinity Focus indicator 4. Self-timer indicator

5. Frame counter

AF 600 QD 1. Month indicator 2. Year indicator

3. Infinity Focus indicator 4. Flash mode indicator

5. Time indicator colon

6. Frame counter/Imprint data 7. Insufficient battery power indicator

8. Data imprint indicator 9. Self-timer indicator

Ecran de contr

AF 600

1. Indicateur de

2. Indicateur du 3. Indicateur de 4. Indicateur du

5. Compteur de

AF 600 OD

1. Indicateur du 2. Indicateur de

3. Indicateur de 4. Indicateur du

5. Deux-points in

6. Compteur de 7. Indicateur de

8. Indicateur d'in

9. Indicateur du

BASIC OPERATION

Fr MISE EI

1. Pour ouvrir le

Installez une j type CR123A

3. Pour fermer.

logement de jusqu'à son e

PROPOS DES

verrouillage o avec le doigt




- To open the battery chamber, lift up on the battery chamber lid lock with your finger, and remove the cover.


 To open the battery chamber, lift up on the battery chamber lift lock with your finger, and remove the cover.

 To open the battery chamber, lift up on the battery chamber lift lock with your finger, and remove the cover.
- remove the cover.


 2. Install one 3V lithium battery (DL123A or CR123A type) in the indicated direction.
- type) in the indicated direction.
 To close, reinsert the cover, then press the battery chamber lid lock until it locks into place.

For batteries, see ABOUT-BATTERIES on pages 96-97.

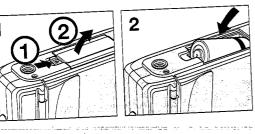

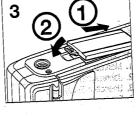

26

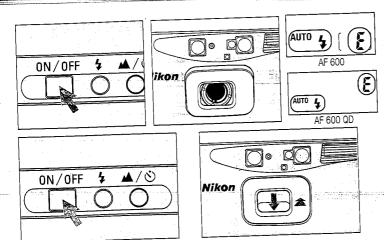

En CHECKING BATTERY POWER

Press power button to turn camera on. The lens extends out, the lens cover automatically opens and E and 400 \$ (auto flash indicator) appear in the LCD panel. If battery is exhausted or has been incorrectly installed, no indication appears.

To turn camera off: Press power button again. LCD panel turns off (or the display changes to the imprint data on LCD panel with AF 600 QD), lens retracts and lens cover closes. To save power, the camera automatically turns-off-approximately 3 minutes after you press the shutter release

button.



Fr CONTROL

n'apparaît.

Pour mettre I nouveau le con

contrôle s'effac

apparaissent si

AF 600 QD), I'd

d'objectif se ref


inutilement la p

automatiqueme

n'est pas sollici

de contrôle. Si la insuffisante ou la

d'objectif s'ouvre Aum ∳ (Indicateur

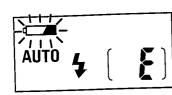

En

At low temperatures or just after flash fires
Under these conditions, it is normal for battery

A basses te

déclenchem

Sous de telle

tension de la

même avec u

dans ces cas

tension insuff

sur l'écran de

Under these conditions, it is normal for battery power to temporarily become weaker, even with a new battery. In these cases, blinking (insufficient battery power indicator) may appear in the LCD panel.

There are two ways to check weak battery power while shooting: a. The blinking appears in the LCD

En

b. The film advance speed or flash recycling time becomes noticeably slower. In both cases, replace battery with a new one. Note: Changing the battery with the film already loaded will automatically cause the film to advance by one frame.

Contrôle de la prise de v


Il existe deux

de la pile pen a. Le symbol contrôle.

b. La vitesse ou le temp rallonge se Dans un cas o

Note: Si un fil l'appareil, le d automatiquen

la pile.

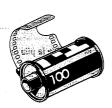

32

DX-coded film in use Film codé DX utilisé Verwendeter DX-codierter Film Película con código DX	Film speed to be set Sensibilité de film sélectionnée Einzustellende ISO-Zahl Sensibilidad seleccionada
ISO 25, 32, 40, 100, 125, 160	ISO 100
180 50, 64, 80, 200, 250, 320	ISO 200
ISO 400, 500, 640, 1600, 2000, 2500	ISO 400
ISO 800, 1000, 1250, 3200	ISO 1000

En LOADING FILM

Use only DX bar-coded film. With non-DX-coded film, film speed is automatically set to ISO 100.

The usable film speed range for DX-coded film is ISO 100 to 1000. With ISO 100. 200. 400 and 1000 films, the camera is automatically set to the exact film speed. When using other film within the usable film speed range (i.e. ISO 125, 250, etc.), the film speed is automatically set to the speed, shown in the When using colour slide film, use only DXcoded ISO 100, 200, 400 or 1000 film; other

films may cause over- or underexposure.

Fr CHARGI

N'utilisez que de non-codé DX, l'a

La gamme util

codés DX s'été

films 100, 200

règle automati

Pour les autres

utilisable de se

ISO, etc), l'app

la sensibilité si

l'indique le tab


100, 200, 400


risquent de pro


n'utilisez que c

En cas d'utilisa

sensibilité du filr

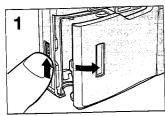

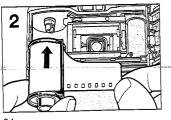

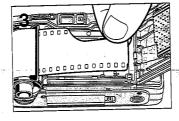

- 1. Slide the camera back lock-release lever up to open the camera back. The camera automatically turns off.
- Avoid loading/unloading film in direct sunlight.
- 2. Position the hole in the bottom of the film cartridge over the film rewind fork and slip film cartridge into the chamber.
 - 3. Pull film leader across to the red film leader

1. Faites glisser pour ouvrir le

automatiquer


2. Positionnez le


3. Tirez l'amorce

film sur l'axe cartouche dai


Evitez de cha

soleil.

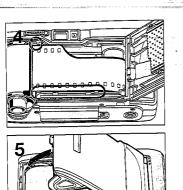

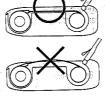



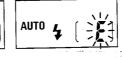



- 4. Make sure film is located between the film guides
- and there is no slack.

 5. Close camera back. Film automatically advances to the first frame with LCD panel showing 1. After 6 seconds, LCD automatically turns off (or changes to the imprinted data display with AF 600 QD).

If film is not properly installed, **E** blinks in the LCD panel. Reload film.

En cas d'insta clignote sur l'alors la procé

4. Assurez-vous

5. Fermez le dos

positionné et


automatiquer

est confirmé

contrôle, 6 se

contrôle s'effa données impi




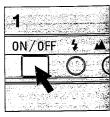







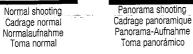



En SHOOTING

- Press power button to turn camera on.
 Lens extends out and lens cover automatically change.
- opens.

 2. Look through the viewfinder and centre autofocus frame marks on the subject.

Fr PRISE

Presser le c

2. Regardez da


l'appareil so protecteur o

sensibilité d

Pour une pri

que votre su repères de d

When shooting from 0.35m to 1m, make sure your subject is framed within the parallax compensation marks.

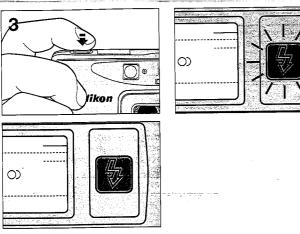

lights up for a second.

3. Lightly press the shutter release button. Confirm that the in-focus/flash ready-light LED

If flash ready-light LED lights up: This means that the light is low and the built-in flash will automatically fire when you depress the shutter release button. For details, see FLASH PHOTOGRAPHY on pages 52 to 71.

3. Sollicitez lég Vérifiez que

> correcte/flas seconde.

Si le témoir

s'allume:


Il indique que lorsque vous


déclencheur reportez-vou FLASH, page

flash intégré





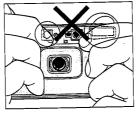

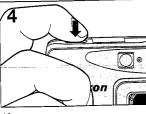



Basic handling

Be sure not to block the lens, autofocus window, or built-in flash with your finger or the camera strap.

4. Fully depress shutter release button to take the picture. Film automatically advances by one frame.




Manipulati

Veillez à ne mise au poi doigt ou cou

4. Pressez fran la photo. Le la vue suivai

NAME AND DESCRIPTION OF THE PERSON OF THE PE

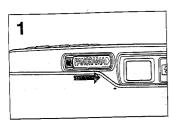



Panorama picture Cadrage panoramique Panorama-Aufnahme Fotografía panorámica

pages 2 and 3.

Taking panorama pictures 1. Slide the panorama switch in the direction of the

A yellow mark appears next to the panorama 2. Look through the viewfinder and centre autofocus

frame mark on the subject. For best results, make sure that the subject is well within the panorama frame marks.

For important notes on panorama pictures, see

3. Take the picture.

Pour de mei sujet se trou cadrage par

Prise de vue o

1. Faites glisse sens de la f

2. Regardez da sensibilité d

Un symbole commande


3. Prenez la ph

Pour les ren

panoramiqu





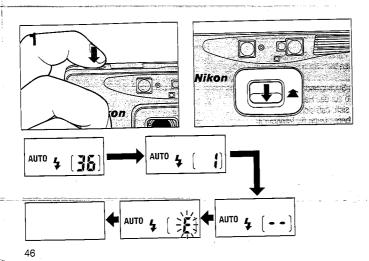

En FILM REWINDING

1. When film reaches end of roll, lens retracts, lens cover closes and film automatically starts rewinding. The frame counter counts backwards until rewind ends, then automatically stops. Check LCD panel to confirm E blinks. Blinking E remains for approx 6 sec., then LCD indicator turns off (or changes to the imprint data display with AF 600 QD).

Fr REBOB


1. Lorsque le fi rétracte, le p rebobinage of

compteur de rebobinage p

Vérifiez que continue de secondes, p

fait apparaîtr

impressionn

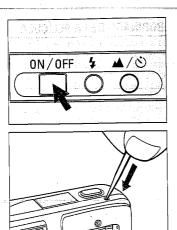



= object.

To interrupt film rewind

During ceremonies, in the theatre, or in other situations where rewind noise may not be welcome, you can temporarily stop rewind.

Press the power button to stop rewinding. Film rewind resumes when you remove your finger from the button.

To rewind film before you reach the end of film roll: Push mid-roll rewind button with a pointed

rebobinage. marche/arré rebobinage relâcherez l


Pour intern

rebobinage Pendant les

bruit du reb

possible d'a

Pour rebot exposé: Pressez la o partiellemen

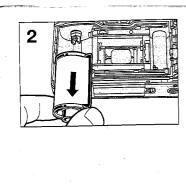


En

2. Open camera back and remove film cartridge.

Pour écond Si vous laiss en position

de film.

To conserve battery power:
If you leave the power button on, the camera automatically turns off after approx. 3 minutes.

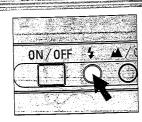

Auto flash

Auto flash with red-eye reduction: See pages 58 to 63. Flash auto avec atténuation des yeux

rouges: voir pages 58 à 63 AUTO Blitzautomatik mit Verringerung roter Augen: Siehe S. 58-63.

Flash automático con reducción de oio rojo: Véanse las páginas 58 a 63.

Auto flash with slow sync: See page 68 to 71.

Flash auto

Blitzautomatik

automático

AUTO

Flash

Flash auto avec synchronisation lente: voir pages 68 à 71. AUTO SLOW Blitzautomatik mit Langzeitsynchronisation: Siehe S.

66-67 Flash permanente: Véanse las páginas 66 a 67. Flash automático de sincronización lenta: Véanse las páginas 68 a 71.

PHOTOGRAPHIC TECHNIQUES

Flash cancel: See

Flash annulé: voir

pages 64 to 65.

pages 64 à 65.

Blitz aus: Siehe

Cancelación del

flash: Véanse las

páginas 64 a 65.

S. 64-65.

Anytime flash: See pages 66 to 67.

Flash imposé: voir pages 66 à 67.

Blitz bei jeder Aufnahme: Siehe S.

En FLASH PHOTOGRAPHY

When camera power is first turned on, auto flash or auto flash with red-eye reduction mode is always activated with AUTO 4 or - T mark appearing on the LCD panel. Press the \$ button to sequentially change the flash operation, as shown.

Turning power off, opening or closing camera back, and changing battery resets flash mode to auto flash or auto flash with red-eye reduction.

mode à l'autre La mise hor fermeture d changemen automatique

auto avec a

TE

PHOT

Fr PHOTO

A la première n


sélectionne tou

auto avec attén

les symboles Au

Pressez la com

.....

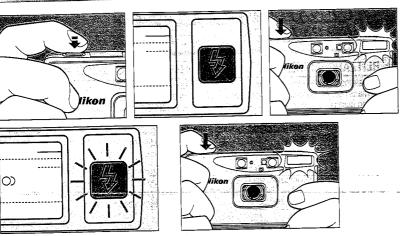

En

Auto flash mode In this mode, the flash fires automatically when available light is insufficient. In such a situation, if you lightly press the shutter release button, the red

flash ready-light LED will light up, indicating the flash is set to fire. To take the picture, depress the shutter release button.

If in-focus/flash ready-light LED blinks:

Flash is not sufficiently charged, and the

depressed to take the picture. Wait a few

stays on. Then press the shutter release

button again to take a picture.

seconds until the LED light stops blinking and

shutter release button cannot be fully

En cas de

mise au p Le flash es devient imp

Mode Flash a

Avec ce mode

automatiquem s'avère insuffi

légèrement le flash recyclé s

est prêt. Pour

le déclencheur


déclencheu quelques si

DEL cesse allumé, Pui déclencheu

has made a sign

ISO	Flash shooting range Portée du flash Blitzbereich Alcance del flash
100	0.35 ~ 3.3m
200	0.35 ~ 4.7m
400	0.35 ~ 6.7m
1000	0.35 ~ 7.8m

The same of the sa

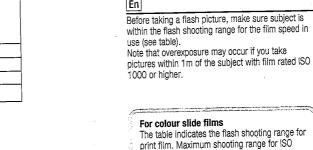

100 colour slide film is 2m.

where the control of the control of

film d'une sens

Avant de prend

que le sujet se


sensibilité du f


Notez que la p

photographiez

Pour les fi Le tableau i

films papier un film diap

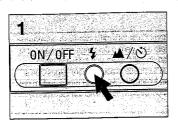

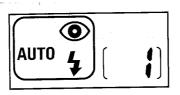

Auto flash with red-eve reduction "Red-eve" is a phenomenon in flash photography, in which the centre portions of a subject's eyes appear bright red in colour pictures, and white in B&W nictures.

To substantially reduce the red-eye effect, the camera's flash operation includes a special red-eve reduction mode. Using this mode, when you press the shutter release button, self-timer indicator/redeve reduction lamp lights for approximately 1 second before flash fires and the picture is taken. This causes the subject's eye pupils to become smaller, reducing the red-eye appearance.

1. Press flash mode button until - mark appears in the LCD panel.


Mode Flash a rouges Le phénomène

typique de la p la pupille des v couleur et blan Pour minimise mode flash spe Avec ce mode. l'illuminateur d rouges/indicate

pendant enviro du flash et l'ex

contraction de diminue le risq Pressez la c

l'apparition

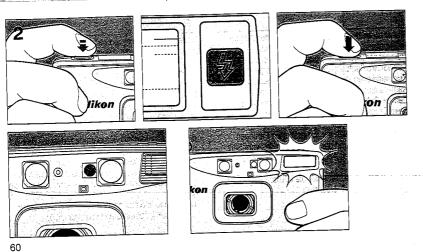

En

2. Lightly press shutter release button and confirm flash ready-light comes on, then fully depress

button to take the picture. Self-timer indicator/red-eye reduction lamp lights for approximately 1 second without releasing shutter, then the picture is taken when the main flash fires.

Make sure you hold the camera steady and that your subject keeps still during the operation.

que le tém Pressez en

L'indicateu

d'atténuati

seconde sa

s'effectue a

principal.

· Veillez à te sujet ne bo

2. Sollicitez le

Once you've activated the auto flash with redeye reduction mode and taken at least one picture, the red-eye reduction mode remains in operation until you select the auto flash mode and take another picture. To ensure the best reduction of red-eye, make sure of the following: · Subjects should look directly at the camera. Subjects with poor vision should wear corrective eyeglasses or contact lenses. • For indoor shooting, make the room as bright as possible. Red-eye tends to be more pronounced with children and cannot be as effectively reduced.

Dès que le n

des yeux rou

photo a été i

ce qu'un aut et une photo

Pour bénéfi

possible, of

Les sujet

l'appareil

Les sujet


porter de

verres de

Pour une

la pièce a

L'effet des " plus pronond être réduit d

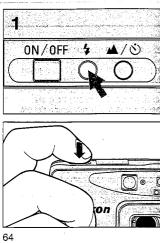





Flash-cancel mode

To shoot without flash in light conditions where camera would automatically fire the flash: 1. Press flash mode button until 3 mark appears on

2. Take the picture.

the LCD panel.


Mode Flash ar

ambiante est te


automatiqueme


1. Pressez la co

l'apparition (2. Déclenchez.

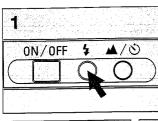



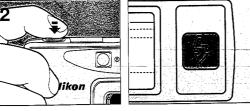

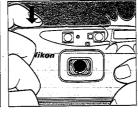

Anytime flash mode

This mode enables you to flash as you wish. 1. Press flash mode button until \$ mark appears in

the LCD panel. 2. Lightly press shutter release button and confirm flash ready-light comes on, then fully depress button to take the picture with flash.

Mode Flash in

- Ce mode vous p le souhaitez.
- 1. Pressez la co l'apparition of
- 2. Sollicitez légi















subject.

Slow sync flash mode—improve background exposure

exposure

If you take a picture of a subject using the Auto Flash at a relatively close distance, the subject will appear bright and well exposed, but the background is usually dark, almost black. To improve background

Mode s

amélior

Si vous i

flash aut

mais l'ai

pratique l'exposit

flash ave

Tandis q

situe nor synchror

1/4 sec.


expositio

l'arrière-

lumière a


bright and well exposed, but the background is usually dark, almost black. To improve background exposure, use Slow Sync flash mode.


Although the slowest shutter speed for Auto Flash is approximately 1/30 sec., when using Slow Sync mode the shutter speed can be controlled to speeds as slow as approximately 1/4 sec., thus allowing better exposure for both the main flash-illuminated subject and the darker ambient-light-illuminated

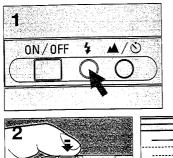

likon




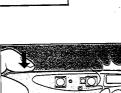

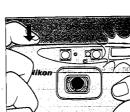




- 1. Press flash mode button until stow 4 mark appears in the LCD panel.
- 2. Lightly press shutter release button and confirm flash ready-light comes on, then fully depress button to take the picture.

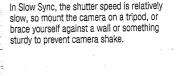



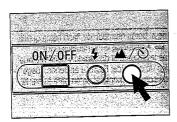



Infinity focus Mise au point sur l'infini Unendlich-Einstellung

One-shot self-timer

Einzelselbstauslöser

Disparador automático

Une vue au

retardement



Two-shot self-timer Deux vues consécutives au retardement

Doppelselbstauslöser Disparador automático de dos disparos

de un disparo See pages 78 to 81. Voir pages 78 à 81

Siehe Seiten 78 bis 81. Véanse las páginas 78 a 81.

En FOCUS

Switching camera power on automatically activates Autofocus. Press 4/8 (focus mode/self-timer) button to change focus operation as shown. Autofocus: Assures consistently in-focus pictures for subjects within the autofocus frame marks. Infinity Focus: Focus is locked at infinity. Use to shoot landscapes, or distant scenes through glass or window panel. Flash is automatically cancelled.

Turning camera off automatically resets focus mode to autofocus.




Fr MISE A la mise sous ter

automatiquemer Pressez la comn noint/retardateu comme indiqué Autofocus: Ce point des sujets

Mise au point s mémorisée sur l navsages ou les Le flash s'annule La mise hors automatiquer

auto.

de mise au point

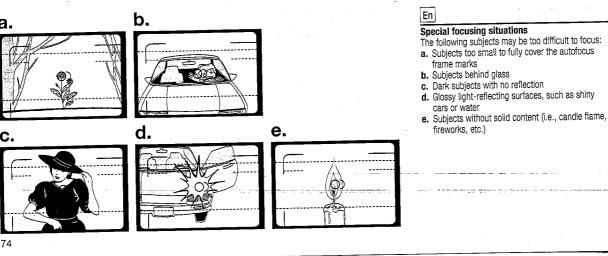

Special focusing situations The following subjects may be too difficult to focus:

- a. Subjects too small to fully cover the autofocus frame marks b. Subjects behind glass
- c. Dark subjects with no reflection
- d. Glossy light-reflecting surfaces, such as shiny cars or water
 - c. Des sujets s d. Des surfaces e. Des sujets s
 - des reflets s flamme de b

Cas particulie


La mise au poir


de sensibilité

b. Des sujets s


difficile: a. Des sujets ti



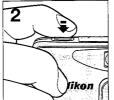

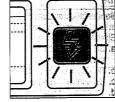



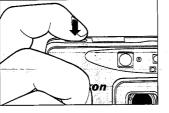

En

Focus lock

To take a picture of a subject outside the autofocus frame marks, use the focus lock.

- 1. Centre autofocus frame mark on the subject.
- 2. Lightly press the shutter release button and confirm that in-focus/flash ready-light LED lights up for a second.
- 3. With focus locked, recompose the picture as desired, then fully depress shutter release button to take the picture.



Mémorisation


Si vous souhaite repères de mise

mémorisation de 1. Axez les repè sur le sujet.

2. Sollicitez légé que le témoir recyclé s'aliu


3. Avec la mise

votre souhait déclencheur

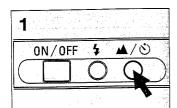




One-shot self- timer Une vue au retardement Einzelselbstauslöser Disparador automático de un disparo

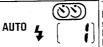

Two-shot self-timer Deux vues consécutives au retardement Doppelselbstauslöser Disparador automático de dos disparos





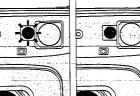

En SELF-TIMER OPERATION

When using the self timer, you will probably want to place the camera on a tripod or some secure flat surface.

- 1. Press ▲ / ③ (focus-mode/self-timer) button twice for one-shot self-timer or three times for two-shot self-timer operation.
- 2. Autofocus always activates in self-timer operation. Position autofocus frame mark on the subject.
- 3. Fully depress shutter release button. The self-timer indicator lamp blinks approx. 8 sec. and then stays on approx. 2 sec. before focus and exposure are locked and shutter is

released.



orsque vous vou nréférable de pla surface plane fixe 1. Pressez deux


mise au point retardement, consécutives


2. Le mode auto retardateur. A

point autofocu 3. Pressez franc Le témoin du

déclencheme

puis reste allu la mise au poi

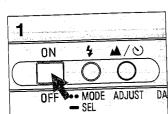

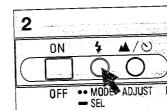

En DATA IMPRINTING FUNCTION (for AF 600 QD)

Data can be imprinted on both normal and panorama size pictures with AF 600 QD. When panorama mode is selected, position and the size of the imprinting data on the negative film are automatically adjusted

to fit the panorama frame. (During panorama mode,

size pictures so two sets of data are imprinted on a

same data is imprinted on the position for normal

frame on the negative film.) Setting data and time

1. Turn the camera power off. 2. Press MODE/SEL button to select one of the five displays. Continue pressing the MODE/SEL button

to make further changes. To help prevent accidental changes, you must press the MODE/SEL button within 2 sec. after the first press, and within 5 sec. there after.



Il est possible d'im nhotos cadrées er avec le AF 600 QE

sélectionné, la loca

données impressi

automatiquement

nanoramique. (En

sont également im pour un cadrage r

mêmes séries de d

sur la vue ainsi qu

Programmation

1. Mettez l'appare


2. Pressez la com

sélectionner ur

-presser la com-

poursuivre les


changements a commande Mo première press

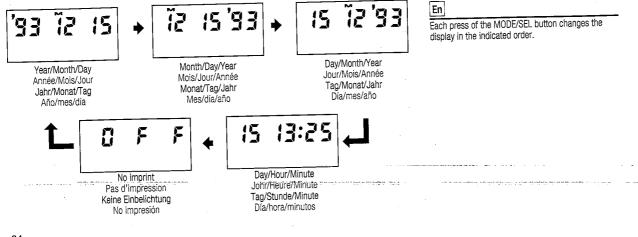


A chaque pression

mode/sélection, l'a

indiqué.

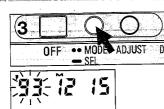

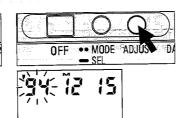

Er

For example, to set March 30, 1994, choose

- Year/Month/Day.

 To set the day, choose display other than
 Day/Hour/Minute. With Day/Hour/Minute display,
- only time can be set.

 3. Set the year.

seconds.

Press and hold MODE/SEL button more than 2 seconds. Year section starts blinking indicating that it can be adjusted. (The display changes to the next mode for a second when MODE/SEL button is pressed within 5 seconds after choosing a display. However, the display returns to the previous mode and section to be adjusted starts blinking when the MODE/SEL button is kept

pressed for more than 2 seconds.) Press ADJUST

button to set the year. To change the number

faster, keep the button pressed for more than 2

pendant plus d met à clignoter modifiée. (L'affi vous pressez la pendant 5 sector Toutefois l'affic la section qui p clignoter quanc mode/sélection

par exemple, pou

sélectionnez l'affi

Pour program

affichage que

Jour/Heure/M

programmée.


Maintenez pres

Pressez la com

programmer l'a rapide des chiff

pressée pendar

3. Programmez 1

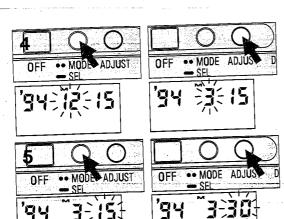

4. Set the month. Press MODE/SEL button so month section starts

blinking, then press ADJUST button to set the

correct month. 5. Set the day. Press MODE/SEL button so day section starts blinking, then press ADJUST button to set the

correct day. 6. To leave adjust mode and confirm your correct display, press MODE/SEL button while the day display is blinking. The newly adjusted data appears without blinking.

For Day/Hour/Minute display: To leave adjust-mode, press-MODE/SEL-button while the minute number is blinking.

-quitter comma section

4. Progra

Mainte mode/

clignot

pour p

mode/


mette: réglage

l'exact

de mod clignot

progra

Pour I

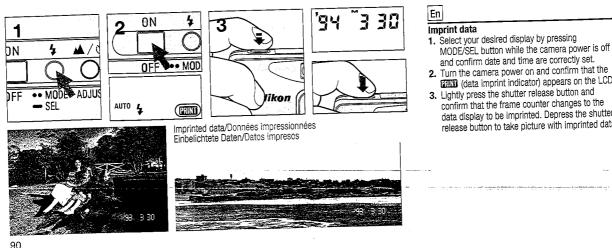

Imprint data

1. Select your desired display by pressing

En

MODE/SEL button while the camera power is off

ERIKE (data imprint indicator) appears on the LCD. 3. Lightly press the shutter release button and

data display to be imprinted. Depress the shutter release button to take picture with imprinted data.

confirm that the frame counter changes to the

and confirm date and time are correctly set.

Impress 1. Sélect

comm hors to

correct 2. Metter


appara 3. Sollicit

que le

appara


franch

avec it

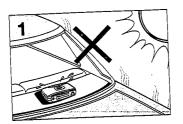

Proposed and the control of the cont *** Company of the Co

The state of the s

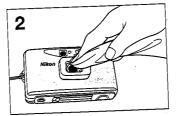

MISCELLANEOUS


En CAMERA CARE TIPS

- 1. Do not leave camera in an excessively hot place; store in a cool and dry place.
- 2. Clean all lens surfaces, including the autofocus window, with a soft, clean cloth.

. Ne lai tempe endro

2. Netto comp



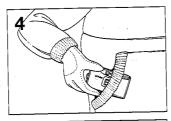





- 3. Avoid taking pictures in the rain or sait water
- 4. Battery power weakens in extremely low temperatures; use new battery and keep camera warm. Sudden extreme temperature changes may cause internal condensation that could damage
- the camera. 5. If camera malfunctions, take it to an authorised Nikon dealer or service center.
- 6. Store the camera in a cool, dry place away from naphthalene or camphor (moth repellents).

- 3. Evitez de prend
- cas de risque d 4. Les performand grand froid; util

j'appareil au ch

de température

condensation à


risque de l'end

appareil, confie

revendeur ou u

s. En cas de mau

6. Entreposez votr frais à l'abri de mites).

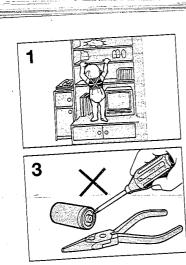

En ABOUT BATTERIES

- Keep batteries out of children's reach.
 If swallowed, call a doctor immediately.
- 2. Never throw used batteries into a fire.
- 3. Never short-circuit, disassemble, heat or attempt to charge batteries.



















En SPECIFICATIONS

Type of camera Picture format

Shooting distance

Film speed setting

Lens

Lens cover

Shutter

Viewfinder

Focusing

98

Normal: 24mm x 36mm Panorama: 13.3mm x 36mm (standard 35mm format)

1000

blades

28mm f/3.5: 3 elements in 3 groups Opens/closes automatically with power button ON/OFF

35mm compact with Nikon AF 28mm f/3.5 lens

0.35m ~ infinity

coverage (at 3m) approx. 82%

Infinity Focus: locks focus at infinity

DX-coded film automatically set to ISO 100, 200, 400 or

Programmed electronic shutter; also serves as diaphragm

Real-image viewfinder; 0.28X magnification; finder

Two focus modes provided—Autofocus and Infinity Focus: Autofocus: active autofocus system

Built-in flash

Focus lock

Frame counter

Self-timer

Controlled aperture Film operation

Auto exposure range EV6 ~ EV17 (ISO 100)

Additive type: counts back during rewind

f/3.5 ~ f/16

operation selectable: cancellable

Flash: guide number 7 (ISO 100, meter)

pressed in Autofocus mode

Fully automatic loading, advance and rewind; film advances by one frame after each shot; mid-roll rewind

Focus is locked as long as shutter release button is lightly

Five modes provided—Auto Flash, Auto Flash with red-

eye reduction, Flash Cancel, Anytime Flash and Slow sync

button provided: auto rewind at end of film roll

Set by focus mode/self-timer button and activated by depressing shutter release button; one-shot or two-shot Battery

i CD pai

Power s Dimensi

Weight (

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorisation from NIKON CORPORATION.

Toute reproduction, en tout ou partie, de ce manuel est, sauf pour de brèves citations dans des bancs d'essai ou des articles de presse, interdite sans l'autorisation écrite de NIKON CORPORATION.

Alle Rechte, auch die des auszugsweisen Nachdrucks (mit Ausnahme kurzer Zitate in technischen Besprechungen), ohne schriftliche Genehmigung durch NIKON CORPORATION, bleiben ausdrücklich vorbehalten.

Queda prónibida la reproducción total o parcial de este folleto (salvo en lo que se refiere a citas breves en artículos o revistas especializadas), sin la autorización escrita de NIKON CORPORATION.

Nikon

NIKON CORPORATION

FUJI BLDG., 2-3, MARUNOUCHI 3-CHOME CHIYODA-KU, TOKYO 100, JAPAN PHONE: 81-3-3214-5311 TELEX: NIKON J22601 FAX: 81-3-3201-5856

Printed in Japan 9&012-DE12 (S563)